



(503) 248-4444
www.bestoilpdx.com

Tank Chart

Measure how much oil you have left in your tank with this handy tank chart. Use a stick or rod to put into your tank until it hits the bottom. Remove the stick, and measure how far up the stick the oil reaches. Use the chart below based on your tank size and your measurement.

Your Tank Size (gallons)	1000	675	550	500	420	335	275
Height (inches)	Gallons	Gallons	Gallons	Gallons	Gallons	Gallons	Gallons
4	43	28	24	21	17	14	14
6	80	53	44	39	33	27	26
8	120	80	66	60	50	40	39
10	165	109	91	83	69	54	53
12	213	141	118	107	89	71	67
14	265	174	146	133	110	87	82
16	318	211	176	160	132	105	97
18	373	248	206	187	155	124	112
20	429	285	246	216	177	142	127
22	486	323	268	244	202	161	142
24	556	362	299	273	226	181	157
26	613	399	329	301	249	199	172
28	668	437	360	330	273	218	187
30	723	474	390	357	296	237	203
32	775	508	419	384	317	254	217
34	825	541	446	410	338	270	231
36	872	573	472	434	358	286	244
38	915	602	496	457	376	301	256
40	954	629	517	478	393	314	265